

FREMARCO DESIGNS

CUSTOM DESIGNED FINE FURNITURE

BUILD YOUR OWN BUFFET


STEP 1 Choose your door style




CIRCLE



MONTAGE

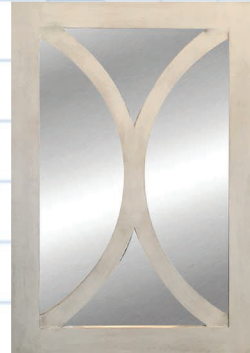


HAMILTON

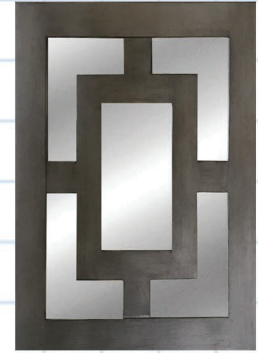


MODERNE

STEP 2 Choose your length


*All cabinet depths: 18"
Custom cabinet sizes available

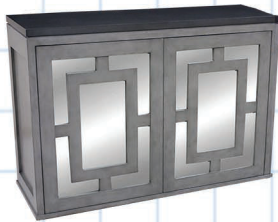


44" cabinet length

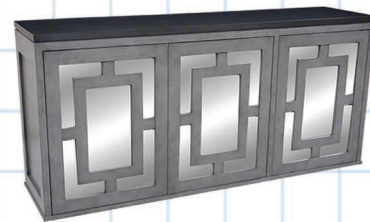

65" cabinet length

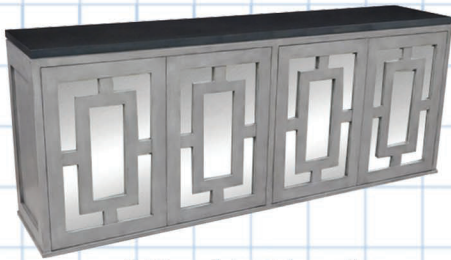

84" cabinet length

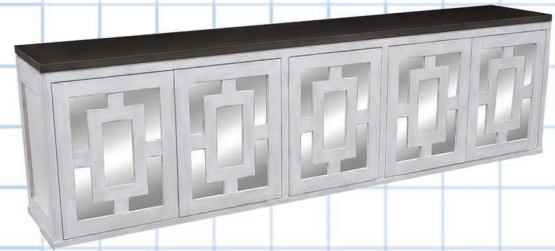

105" cabinet length


STEP 3 a. Choose your base

* Base height combines with cabinet height to create overall height



TAPERED FOOT

1 3/4" height



PLINTH

3 3/4" height



TAPERED LEG

5 3/4" height

STEP 3 b. Choose your height

1. MEDIA (28 1/4") 2. BUFFET (34 1/4")

Overall Height

30"	36"
32"	38"
34"	40"